

A PUBLICATION OF THE RCA ELECTRON TUBE DIVISION

VOL. 20, NO. 4

© 1960, RADIO CORPORATION OF AMERICA

DECEMBER, 1960

DETERMINATION OF TYPICAL OPERATING CONDITIONS

For RCA Tubes Used as Linear RF Power Amplifiers

Part I

By Claude E. Doner, W3FAL

RCA Electron Tube Division, Lancaster, Pa.

During the past few years, ham interest in single-sideband transmission has been on a continual upswing. As a result, numerous articles have been published on the theory and construction of linear triode and tetrode amplifiers. While these articles have discussed classes of tube operation and compared grid-drive to cathode-drive circuits, only a handful provided design information for adapting tube manufacturers' data to available components or to the amateur's specific requirements.

Included among the "selected few" was an article by A. P. Sweet, which appeared in the December, 1954, issue of HAM TIPS. It presented such information in the form of step-by-step calculations for use in converting published maximum ratings to typical operating conditions.

Now, six years later, having recognized the need to bring this design information up to date, HAM TIPS is pleased to offer here Part I of a two-part article prepared by W3FAL. This first part extends the calculations to include cathode-drive (grounded-grid) operation of tetrodes and triodes in class AB₁ service.

In the next issue, Part II will cover the procedure for calculating typical operating conditions for class B operation of triodes or triode-connected tetrodes in a cathode-drive circuit.

Sample calculations are based on published data and curves for the RCA-7094 power tetrode. Also included is a chart which lists maximum ratings and typical operating conditions for several widely used RCA power tubes.

Class AB, Operation of Tetrodes (Grid-Drive Circuit)

When it is desirable to operate tubes at conditions other than those given in the published data, typical operating conditions can be calculated from the maximum ratings and characteristics curves. The calculations required for class AB₁ operation of a tetrode in grid-drive

service are given below. This procedure may be adapted to triode tube types by eliminating the terms $E_{\rm c2}$, $I_{\rm c2}$, $i'_{\rm c2}$, and SI from the calculations.

(1) Make sure that E_b is within maximum ratings. (E_b is one of 21 symbols defined on page 2.)

(2) On the average plate-characteristics

curves, select a point near the "knee" of the curve for zero control-grid voltage; record i'_b and e_{bmin}. From the average screen-grid characteristics curves, determine i'c2 for this point; record E_{c2} for the curves used.

(3) Calculate I_{bms} : $I_{bms} = i'_b/3$.

(4) Calculate PD: PD = $(I_{bms}/4)$ $(E_b + 3)$

(5) Calculate SI: SI = $E_{c2}i'_{c2}/4$.

(6) Calculate PI: $PI = E_bI_{bms}$.

(7) Check the values obtained in steps 3 through 6 to determine whether they are within tube ratings. If either I_{bms}, PI, or PD is out of ratings, select a point slightly lower than the original point on the knee of the curve for zero control-grid voltage and recalculate steps

DC plate voltage (with respect to $\mathbf{E_{b}}$ cathode)

e_{bmin} Minimum plate voltage necessary to produce the required peak current (from the characteristics curves)

DC screen-grid voltage E_{c2} DC control-grid voltage \mathbf{E}_{c1}

Maximum control-grid drive volt- $\mathbf{e}_{\mathbf{cm}}$ age needed to obtain the required peak plate current at a given minimum plate voltage

Peak value of control-grid voltage $\mathbf{E'_g}$

swing

Maximum signal, dc plate current I_{bms} Zero-signal, dc plate current $\mathbf{I}_{\mathbf{bo}}$

Instantaneous peak plate current i'_b I_{e1} Maximum-signal, dc control-grid current

 I_{e2} Maximum-signal, dc screen-grid current

i'c1 Instantaneous peak control-grid current

 i'_{c2} Instantaneous peak screen-grid current

PD Plate dissipation at maximum sig-

 PD_{α} Plate dissipation at zero signal

PΙ Plate power input at maximum signal

PO Power output at maximum signal P_{ft} Feed-through power at maximum signal (cathode-drive operation)

DP Driving power at maximum signal

SI Screen-grid input at maximum signal

 $R_{\rm p}$ Effective rf plate-load resistance 2 through 6. If only SI is out of ratings, select a point slightly higher on the knee. If SI and either I_{bms}, PI, or PD are out of ratings, select a lower value of i'b (either in the negativecontrol-grid region or at a lower screen-grid voltage) and repeat steps 2 through 6.

(8) Calculate PO: PO = PI - PD.

(9) Calculate I_{bo} : $I_{bo} = I_{bms}/5$.

(10) Determine E_{c1} from the plate-characteristics curves as the control-grid voltage at which the plate voltage is E_b and the plate current is I_{bo}.

(11) Calculate E'_g : $E'_g = |E_{e1}| + e_{cm}$. This value of E'g is equal to the absolute value of E_{c1} (the straight lines around this term indicate that its plus or minus sign may be ignored) plus the algebraic value of e_{cm} (include the sign). If the point selected in step 2 was on the curve for zero control-grid voltage, then e_{cm} is equal to zero and E'_{g} $|\mathbf{E_{c1}}|$.

(12) Calculate I_{c2} : $I_{c2} = i'_{c2}/4$.

(13) Calculate DP: DP $\equiv E'_{g}i'_{c1}/4$. (For AB₁ operation, i'c1 equals zero; therefore, DP is also zero.) This value of DP does not include rf tube and circuit losses. The power available from the driver, therefore, should be at least 10 times this value in grid-drive operation. Because AB₁ tube driving power is zero, determine the approximate driver-output requirements from published AB₂ typical operating conditions at approximately the same E'_{g} and operating frequency.

(14) Calculate R_p : $R_p = E_b/1.7 I_{bms}$.

Example - The following example illustrates the calculation of typical operating conditions for class AB₁ tetrode operation of the RCA-7094 in a grid-drive circuit:

(1) The maximum plate voltage rating is

2000 volts.

(2) From the plate-characteristics curves shown in Figure 1 ($E_{c2} = 350$ volts), select a point PI on the knee of the curve for zero control-grid voltage. At this point, i'b is 0.650 ampere and e_{bmin} is 300 volts. At the corresponding point on the grid-characteristics curves shown in Figure 2, i'c2 is equal to 0.085 ampere.

(3) $I_{bms} = i'_{b}/3 = 0.217$ ampere.

(4) PD = $(I_{bms}/4)$ $(E_b + 3 e_{bmin}) =$ (0.217/4) [2000 + 3 (300)] = 157 watts.

(5) SI = $E_{c2}i'_{c2}/4 = (350) (0.085)/4 =$ 7.4 watts.


(6) $PI = E_b I_{bms} = (2000) (0.217) = 434$ watts.

RCA HAM TIPS

Table I: Ratings and operating conditions for RCA tubes used as linear rf power amplifiers.

Maximum Ratings—Absolute Values											Typical Operation									
Tube	Class of		Plate	Grid-No. 2	Max-Signal Plate	Max-Signal Plate	Max-Signal Grid-No. 2		Crid No. 1	Diete	Peak Zero-Signal Max-Signal Max-Signal Drive Max-Signal									
Туре	Operation	Service		Voltage	Current	Input	Input	MaxSignal Plate Dis Grid-No. 1 + Grid-No. 2 sipation Current (I _{c1} + I _{c2}) - ma (PD)-wat	Resistance		Grid-No. 2 Voltage (E _{c2})	Grid-No. 1 Voltage (E _{c1})	Grid-No. 1 Voltage (E'g)	Plate Current (1 _{bo})—ma	Plate Current (1 _{bms})—ma	Grid-No. 2 Current	MaxSignal Grid-No. 1 + Grid-No. 2 Current (I _{C1} +I _{C2}) — ma	Power (DP)	Power Output	
2E26	AB ₁	CCS ICAS	400 500	200 200	75 75	30 37.5	2.5 2.5	10 12.5	30 K 30 K	400 500	200 200	-25 -25	25 25	9	45 45	10	ourrent (ici i icz) — ind	- #0113	12 15	
	AB ₂	CCS ICAS	400 500	200 200	75 75	30 37.5	2.5 2.5	10 12.5		400 500	125 125	-15 -15	30 30	10 11	75 75	16		0.2 0.2	20 25	
4-65A	ABı	ccs	3000	600	150	07.0	10	65	250 K	1000 1500	500 500	-85 -85	85 85	15	85 90	16 12		0.2	40	
	7,01	- 000	3000				10	00	250 K	1750	500	-90	90	15 10	85	7 9			70 85	
	AB ₂	ccs	3000	600	150		10	65	€ *	1000 1500 1800	250 250 250	-30 -35 -35	105 100 90	30 30 25	150 125 110	22 15 13		2.5 1.5 1.0	85 125 135	
4-125A	AB ₁	ccs	3000	600	225		20	125	250 K	1500 2000 2500	600 600 600	-90 -94 -96	90 94 96	30 25 25	110 120 115	9			80 115 165	
	AB ₂	ccs	3000	400	225		20	125	Total Transition of the State o	1500 2000	350 350	-41 -45	141 105	44 36	200 150	17		5.0 3.0	175 175	
4-250A	AB ₁	ccs	4000	600	350		35	250		2500 2000 2500	350 500 500	-43 -88 -90	139 88 90	47 55 60	200 215	3 11 7		2.5	200 230 310	
									in production of the second	3000 2000	500 300	-93 48	93	60	205		·	5.5	370 325	
	AB ₂	ccs	4000	600	350	4.000 de la companya	35	250		2500 3000	300 300	-51 -53	100 100	60 62	250 236	12 16		5.5 5.0 4.5	420 520	
807 1625	AB ₁	CCS ICAS	600 750	300 300	120 120	60 90	3.5 3.5	25 30	100 K 100 K	500 600 750	300 300 300	-32 -34 -35	32 34 35	22 18 15	70 70 70	8 8 8			23 28 35	
	AB ₂	ccs	600	300	120	60	3.5	25		500 600	300 300	-30 -32	43 40	30 24	120 100	10 9		0.2	38	
	Abz	ICAS	750	300	120	90	3.5	30		750	300	-35 -35	48	15	120	10		0.1	40 60	
811A	В	ccs	1250		175	165		45		750 1250		0	100 78	16 25 22	175 130			10 4	90 120	
		ICAS	1500		175	235		65		1000 1250		0	93 88	27	175 175			7.5 6	125 155	
813	AB ₁	CCS ICAS	2250 2500	1100 1100	180 225	360 450	22 22	100 125		2000 2250 2500	750 750 750	90 95 95	80 85 90	25 25 25	130 125 145	20 26 27			165 190 245	
829B Natural Cooling	AB ₁	CCS ICAS	750 750	225 225	250 250	100 120	7 7	30 40	100 K 100 K	500 600 750	200 200 200	20 18 21	40 36 42	20 40 20	100 100 100	20 18 20			35 44 55	
	AB ₂	CCS ICAS	750 750	225 225	250 250	100 120	7	30 40		500 600 750	200 200 200	-18 -20 -19	50 50 50	30 26 32	180 155 160	26 22 25		0.6 0.4	60 65 85	
832A	AB ₁	ccs	750 750	250 250 250	90	36 50	5	15 20	100 K	500 600	180 150	-30 -30	60 60	14 12	70 60			0.5	22 23 30	
833A	В	ICAS	3300	250	115 500	1300	5	20 350	100 K	750 3300	150	-32 -80	64 190	60	60 300	7		20	30 710	
6146 6159	AB ₁	ccs	600	250	125	60	3	20	100 K	400 500 600	190 185 180	-40 -40 -45	40 40 45	32 29 13	114 108 100	13 13 12			27 35 40	
	,,,,,,	ICAS	750	250	135	85	3	25	100 K	600 750	200 195	-50 -50	50 50	14 12	115 110	14 13			47 60	
	AB ₂	ccs	600	250	125	60	3	20		400 500 600	175 175 165	-41 -44	48 51	17 14	116 121	9 9 9		0.2	31 41	
	Abz	ICAS	750	250	135	85	3	25		600 750	190 165	-44 -48 -46	49 55 54	11 14 11	104 135 120	10 10		0.3 0.2 0.3 0.4	41 45 55 65	
6524	AB ₂	ccs	500	300	150	70	3	20	30 K	400 500 500	200 200 200	-23 -26 -25	72 70 76	25 20 25	145 116 145	10 10 10		0.1 0.1 0.1	39 40	
		ICAS	600 1500	300 400	150 350	85 300	20	20 100	30 K	600	200	-26	76	21	135	13		0.1	50 57	
7094	AB ₁	CCS ICAS CCS	2000 1500	400	350 350 350	400 300	20	100 125 200 100	30 K 30 K	1500 2000	400 400	-65 -65	60 60	30 30	200 200	35 35		4	185 250	
7500	B*	ICAS	2000	E00	350	400		200 125	05.11	1350 1750	0	0	50 50	30 44	200 200		140 140	15 15	160 210	
7580	AB ₁	ccs	2000	500	350 ●		12	250	25 K	2000	400	-77	77	70	225	35		1	400 ● ●	

7094.

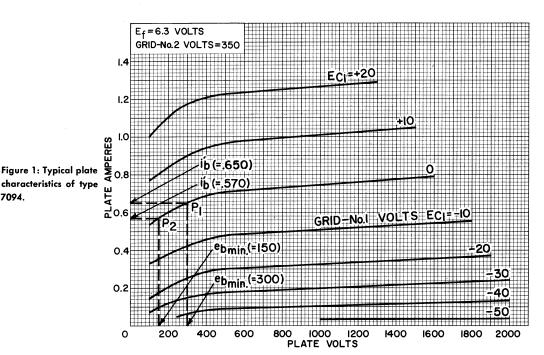

(7) Because both PD and PI are above the maximum ratings for the 7094, a lower value of i'b must be used. Select a point P2 below the original point on the knee of the curve for

zero control-grid voltage and recalculate steps 2 through 6.

At the new point, i'b is 0.570 ampere and e_{bmin} is 150 volts. At this point on the grid-

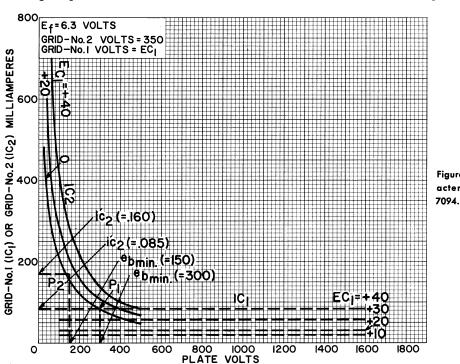


Figure 2: Typical characteristics for type

characteristics curves, i'c2 is 0.160 ampere.

 $I_{bms} = 0.570/3 = 0.190$ ampere.

PD = (0.190/4) [2000 + 3 (150)] = 116 watts.

SI = (350) (0.160)/4 = 14 watts. PI = (2000) (0.190) = 380 watts.

All values in steps 3 through 6 are now within maximum ratings, and the calculations may be continued.

(8) PO = PI - PD = 380 - 116 = 264

watts.

(9) $I_{bo} = I_{bms}/5 = 0.190/5 = 0.038$ am-

pere.

(10) E_{c1} can now be determined from the plate-characteristics curves as the control-grid voltage at which the plate voltage is 2000 volts and the plate current is 0.038 ampere; $E_{c1} = -50$ volts.

(11) $E'_g = |E_{c1}| + e_{cm} = 50 + 0 = 50$

volts.

(12) $I_{c2}=i'_{c2}/4=0.160/4=0.040$ ampere.

(13) DP = $E'_g i'_{cl}/2 = (60) (0)/2 = 0$.

A suitable value of driving power can be

determined from Table I. For the 7094 in ICAS AB₁ service, a typical value of 4 watts is listed.

(14) $R_p = E_b/1.7 I_{bms} = 2000/ (1.7 \times 0.190) = 6200 \text{ ohms.}$

Table I shows the maximum ratings and typical operating conditions for several popular RCA tubes in linear rf amplifier service for single-sideband, suppressed-carrier service.

It should be remembered that the typical operating conditions shown by the manufacturer (or calculated by the preceding methods) are only approximate. Minor adjustments are usually made in actual operation by slight variation of the control-grid bias or screen-grid voltage. In linear rf amplifier circuits for single-sideband, suppressed-carrier transmission, it is particularly important to check the actual operating conditions when the transmitter is first set up to assure that linear operation within the maximum tube ratings is being obtained.

Information furnished by the Radio Corporation of America is believed to be accurate and reliable. However, no responsibility is assumed by RCA for its use; nor for any in-

fringements of patents or other rights of the parties which may result from its use. No license is granted by improcation or otherwise under any patent or patent with the CA.



From your local RCA distributor, headquarters for RCA receiving and power tubes.

RCA HAM TIPS is published by the RCA Electron Tube Division, Harrison, N. J. It is available free of charge from RCA distributors.

Harvey Slovik, Editor

GEORGE D. BARBEY Reading

Lancaster

CO., INC.
Pottstown
Lebanon

WHEN MAING PLACE POSIGE

BLK. RT.

